


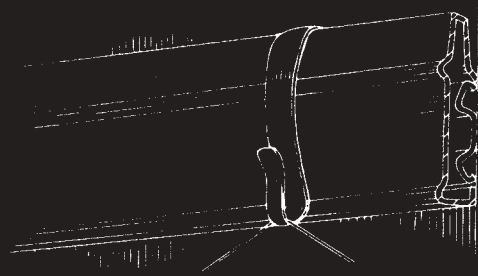

SECTION FOUR


- **PICTURE MOULDINGS**
- **WIRE MOULDINGS**
- **CORNICES**
- **HANDRAILS**
- **CAP MOULDINGS**
- **CHAIR RAILS**

Examples of cornice combinations are illustrated on page 76.
Others can be created by using different tooling combinations.




1333










PICTURE
MOULDING


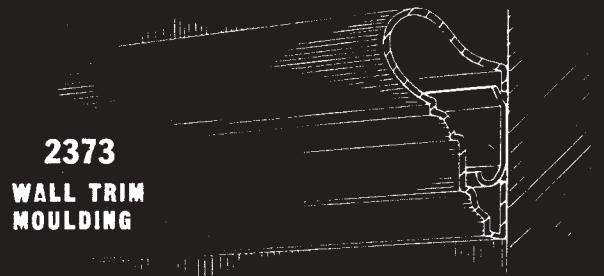




2373



WALL TRIM
MOULDING






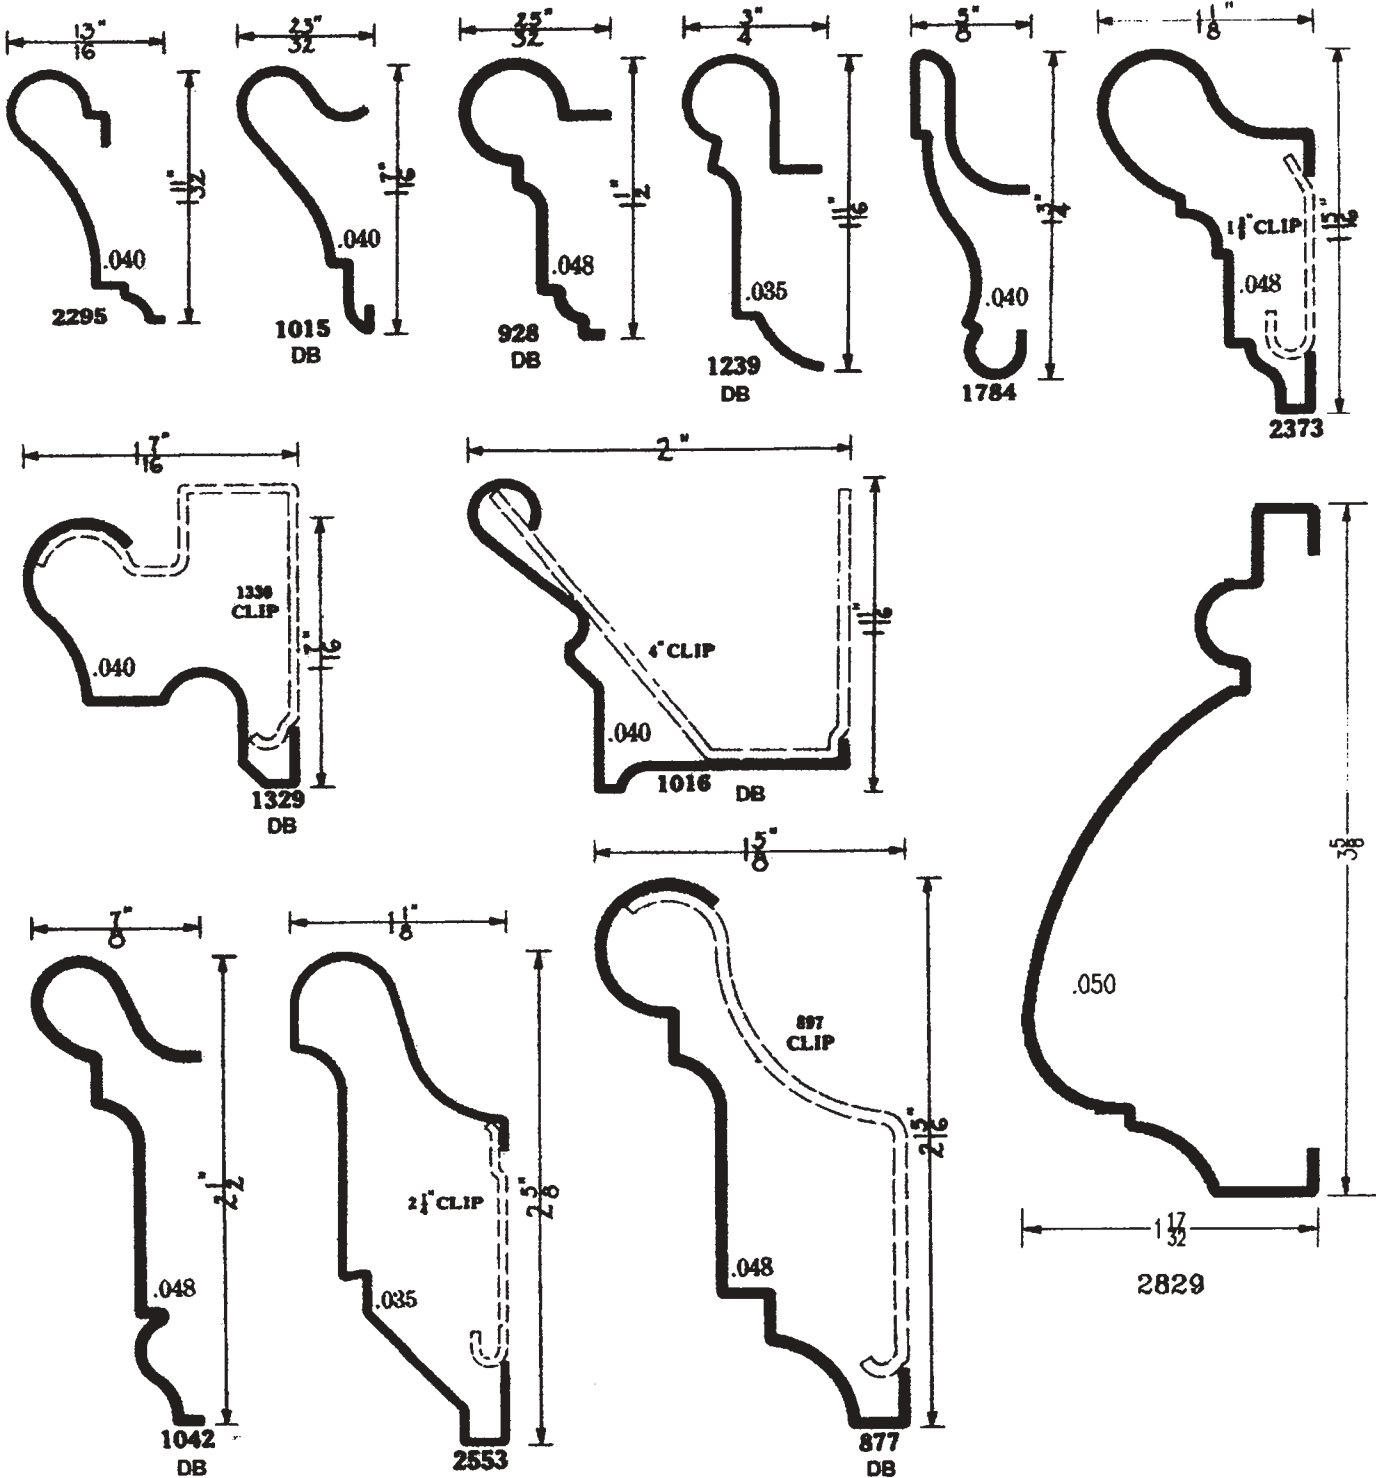


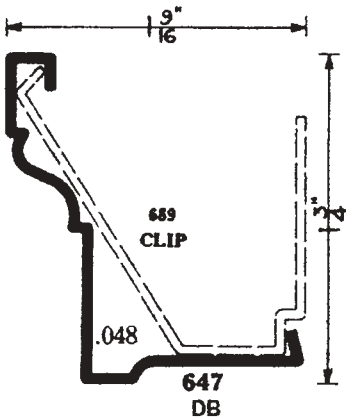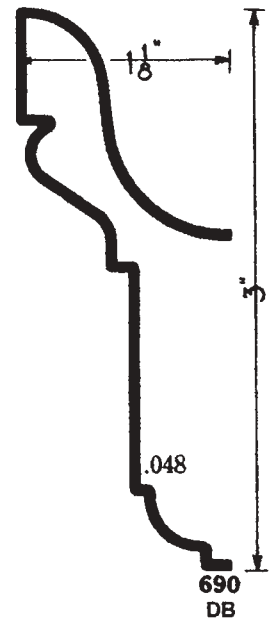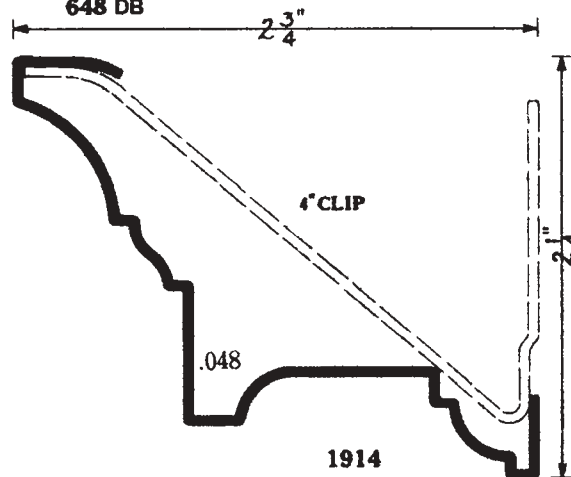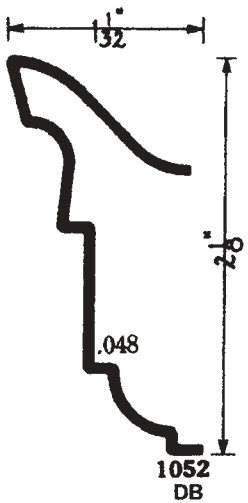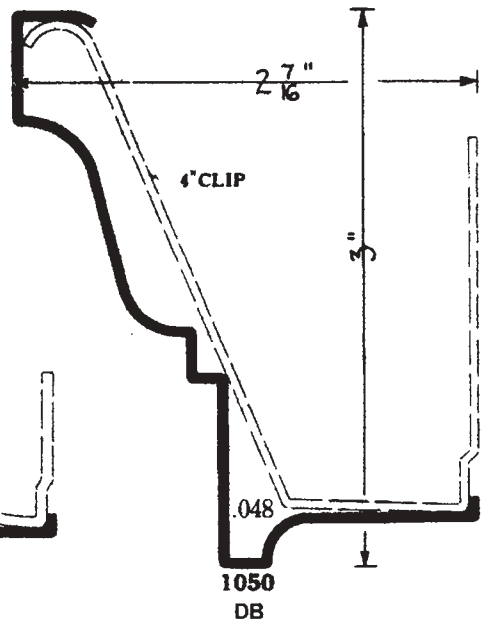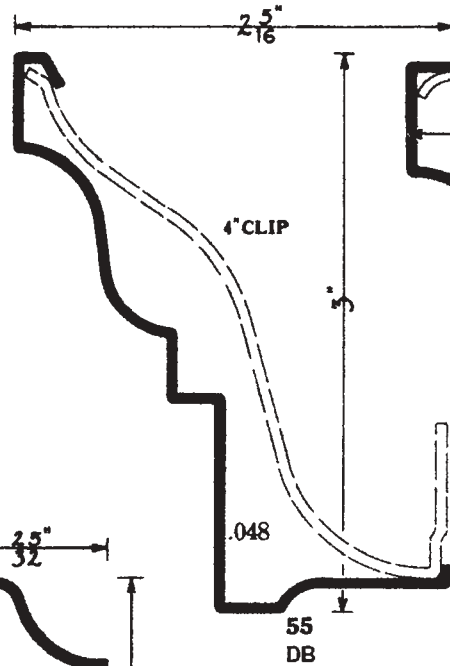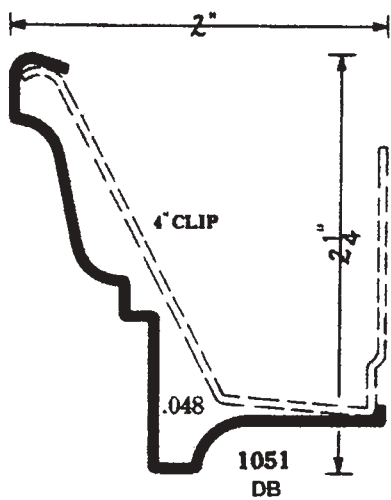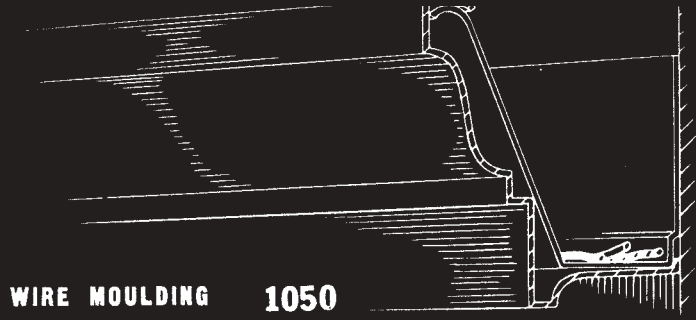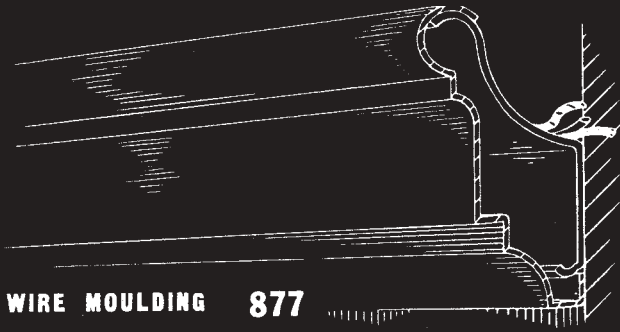


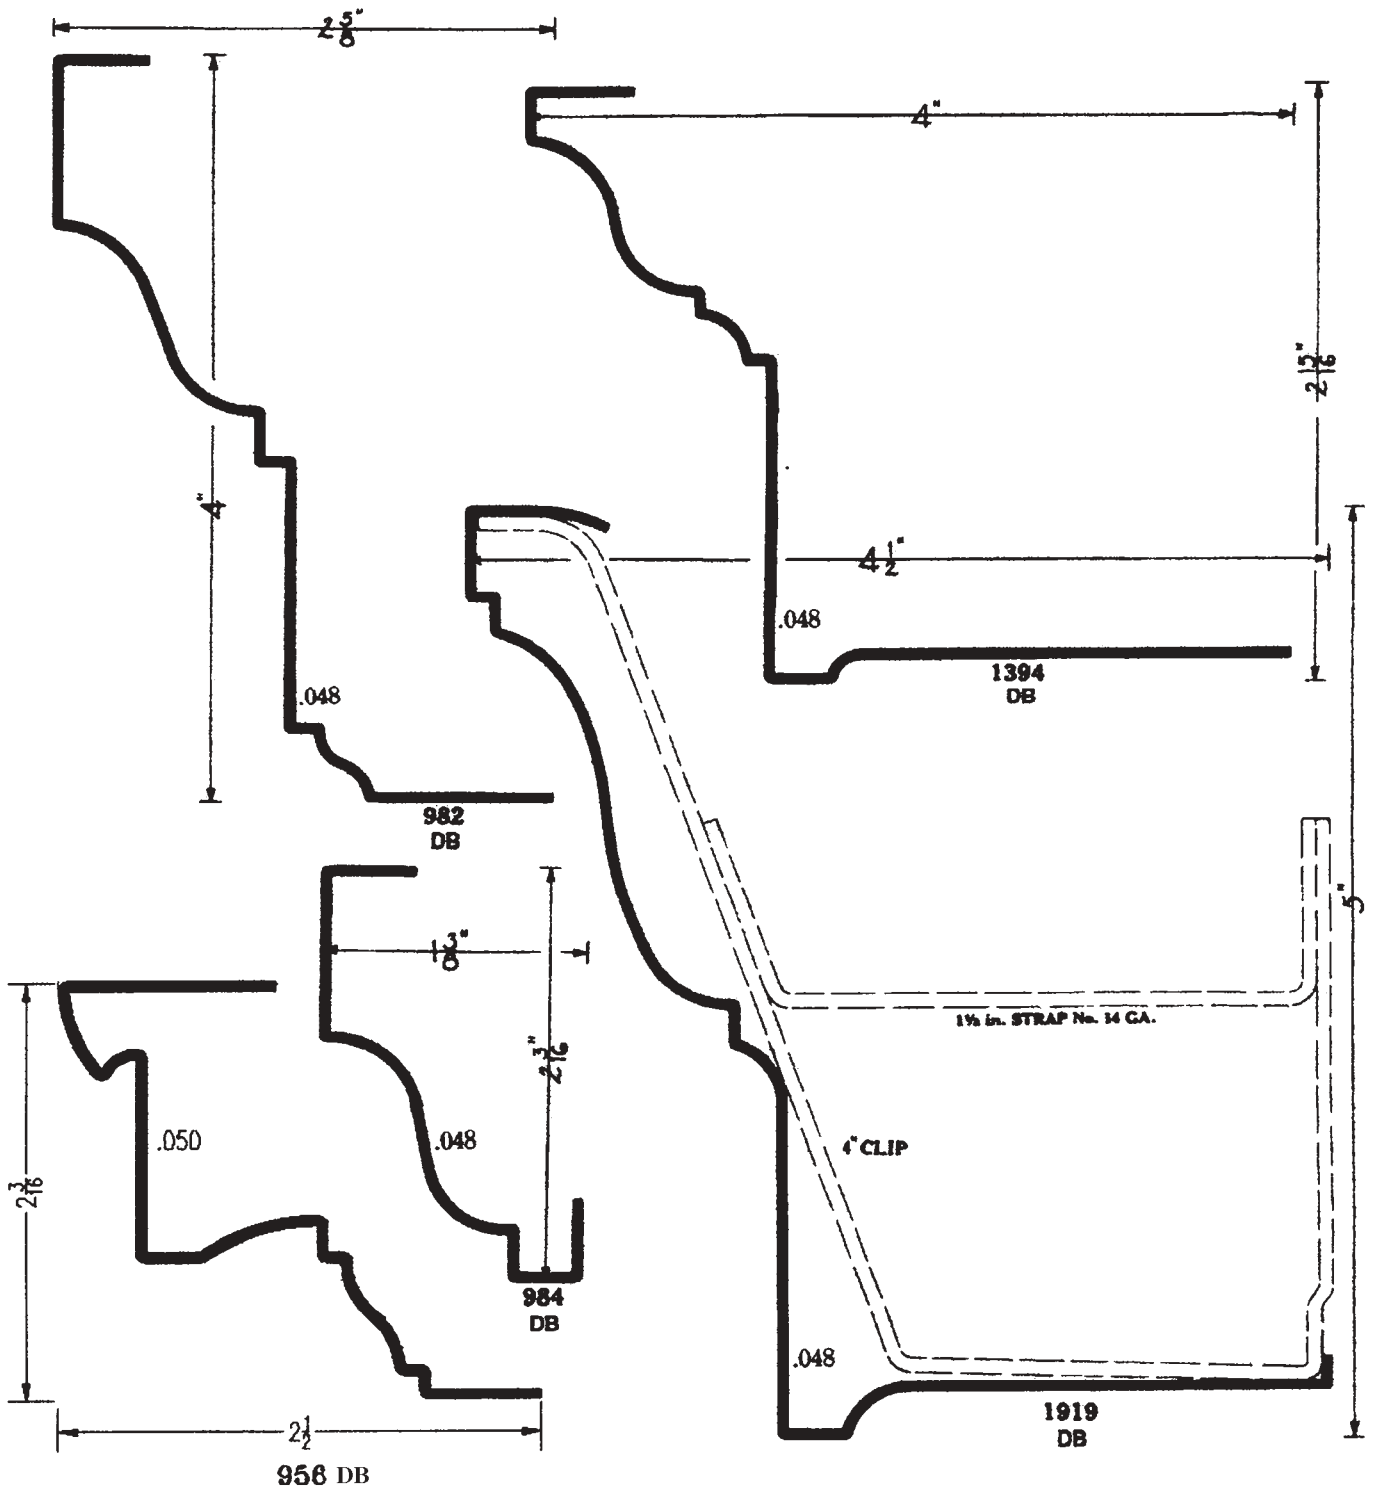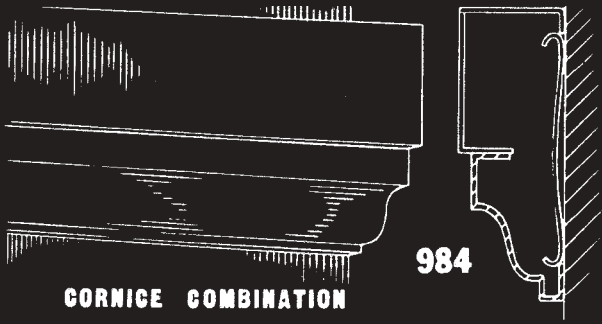

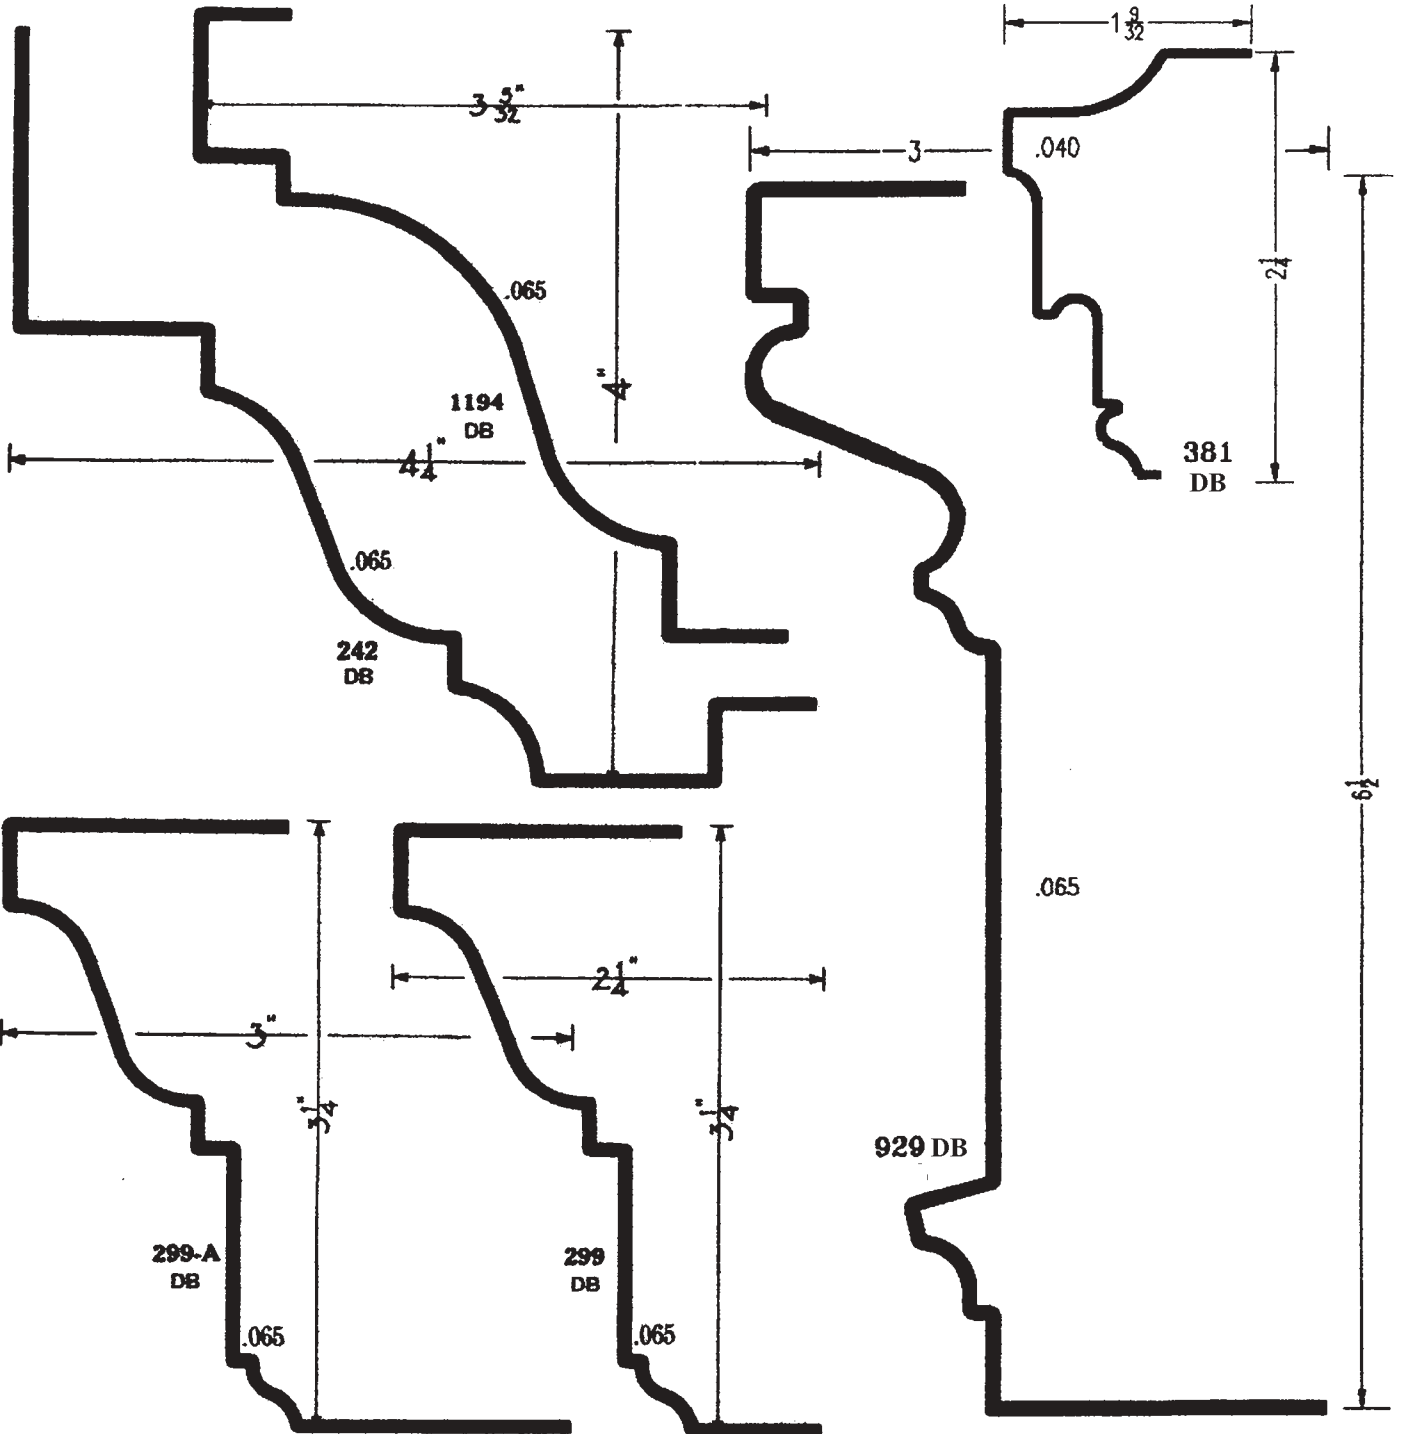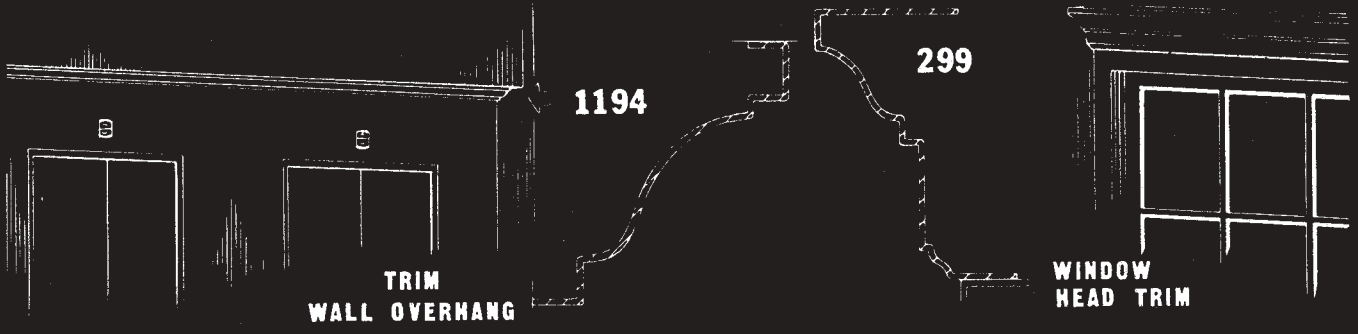


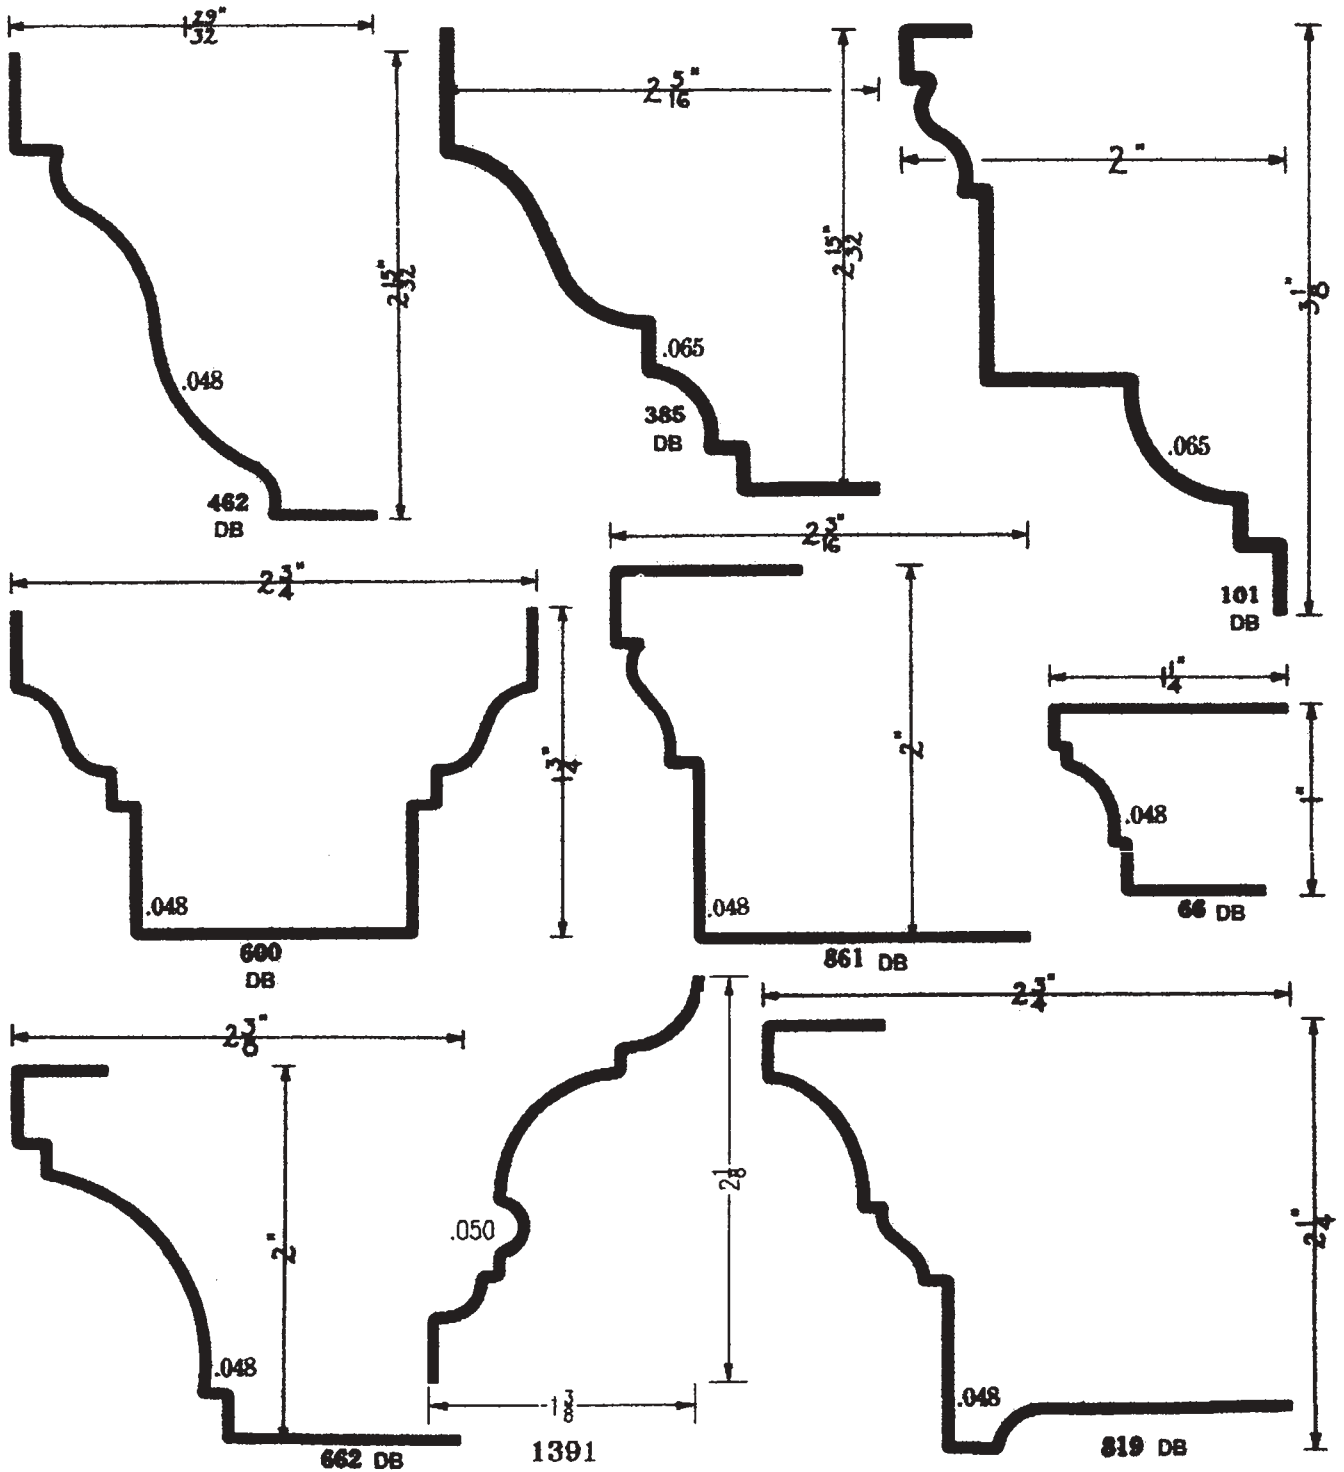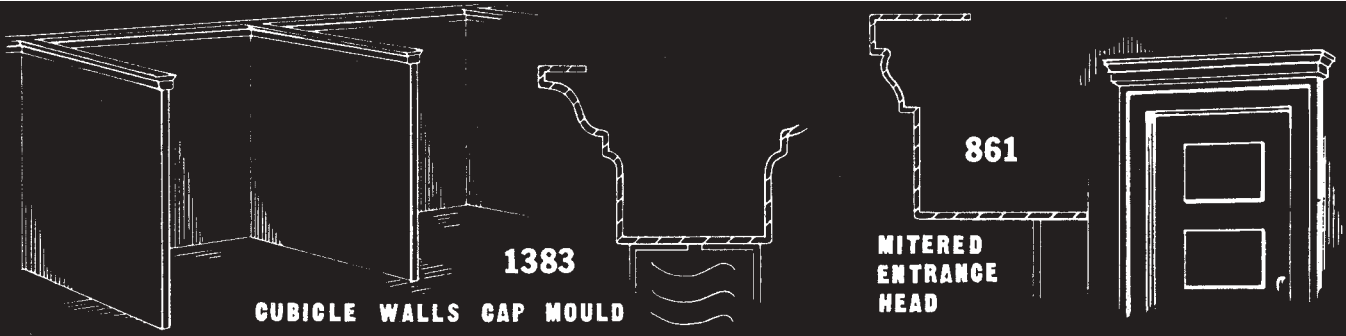

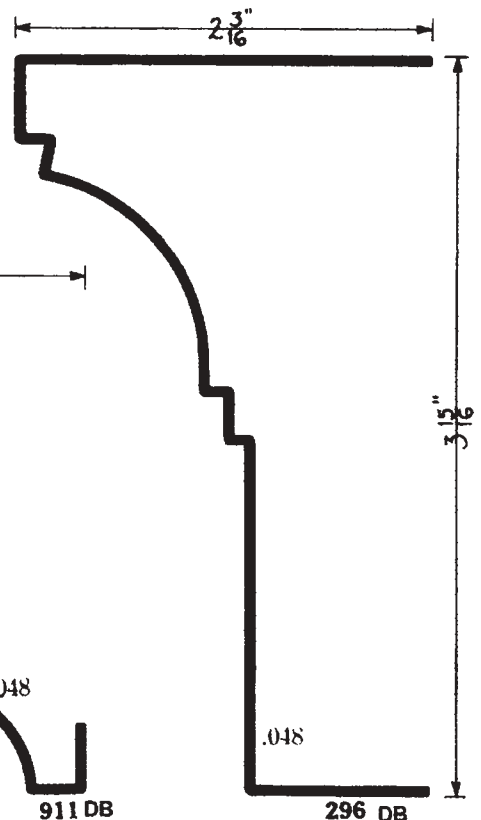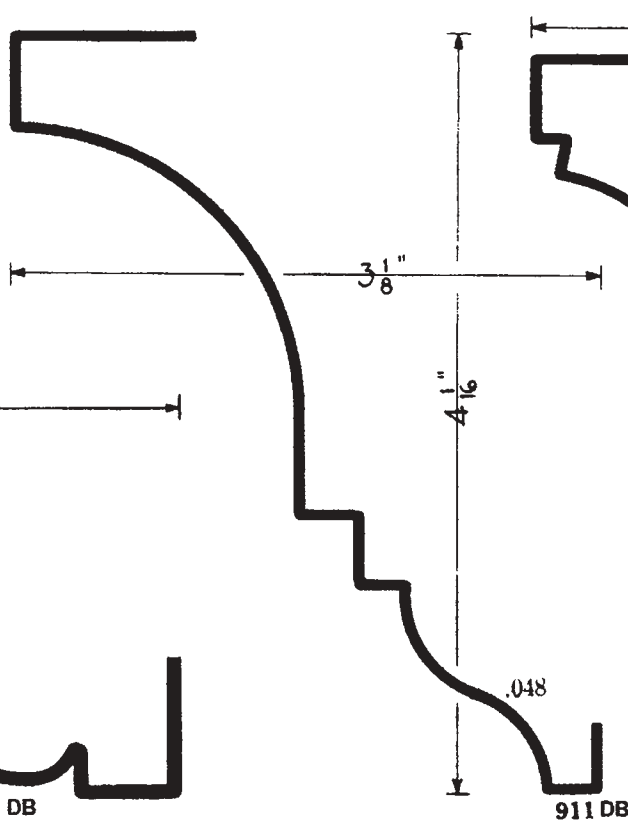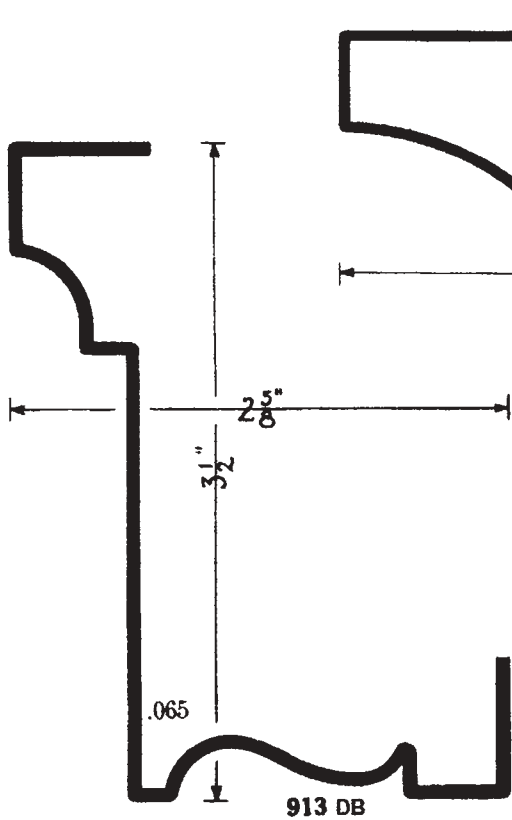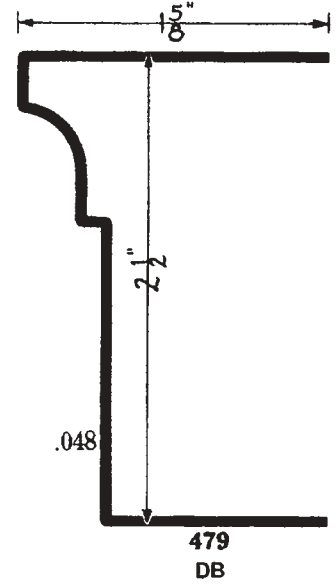
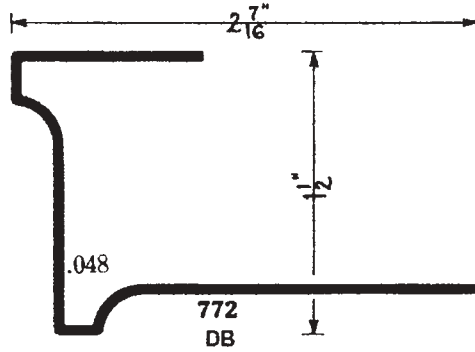
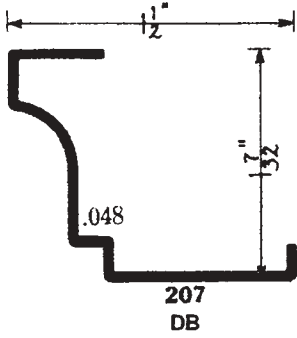


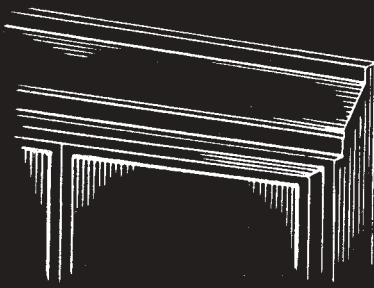


2253
RECESSED
HEAD BAND

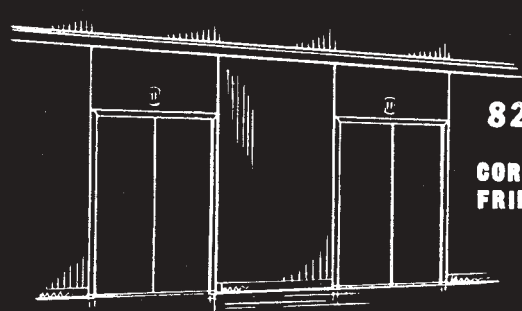


821
CORNICE
FRIEZE

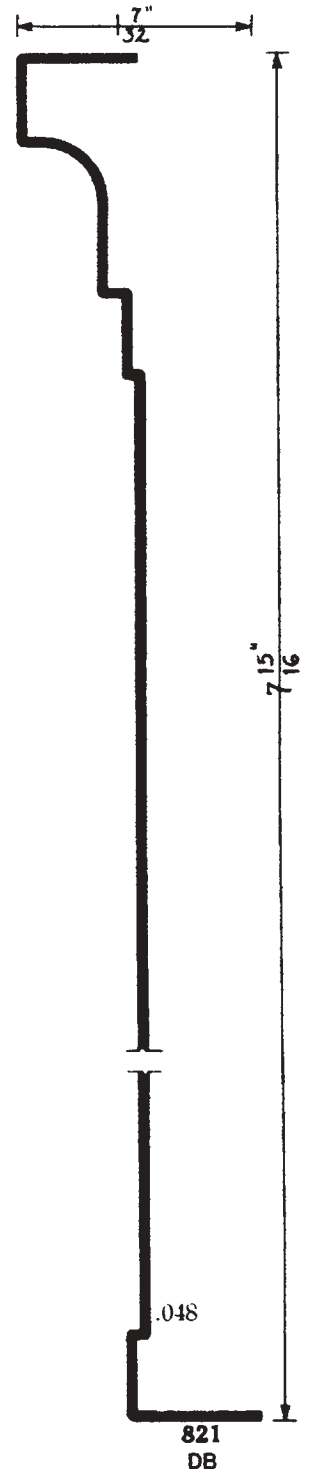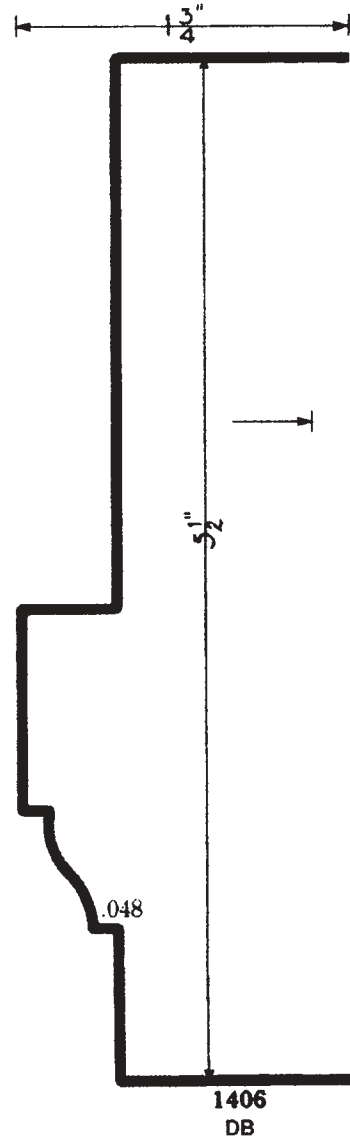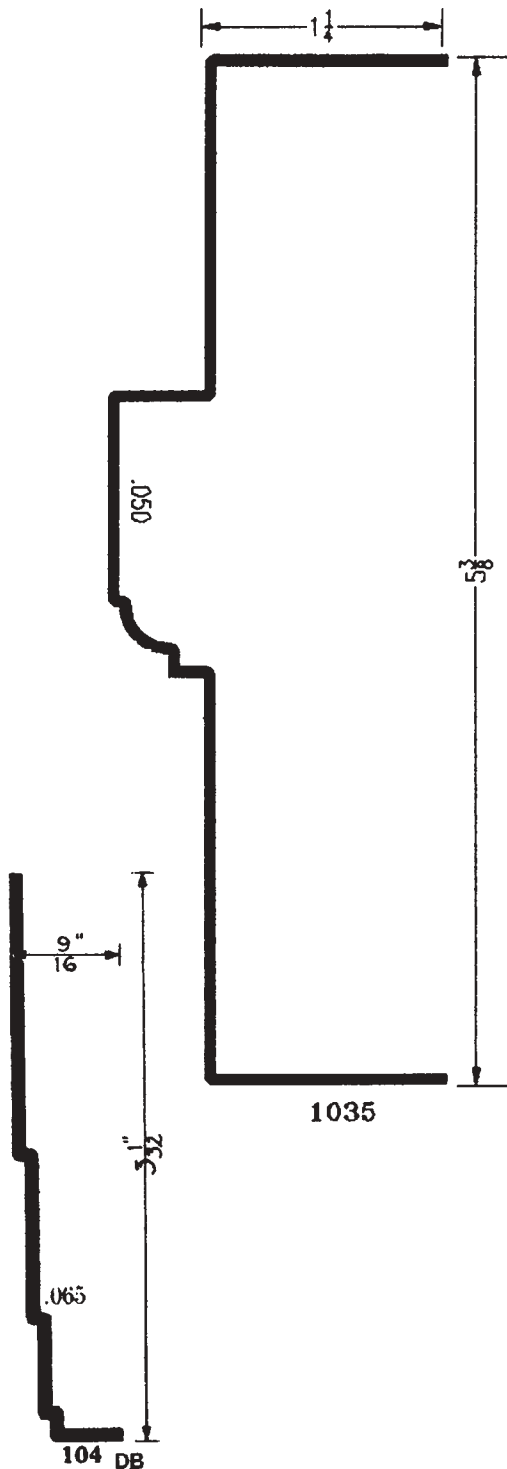

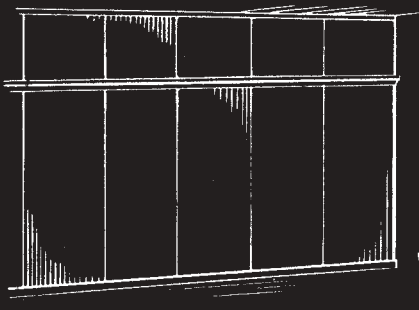


753












**PANEL
WALL
CORNICHE**

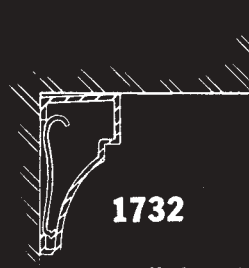

1732


TRIM FOR WALL OVERHANG

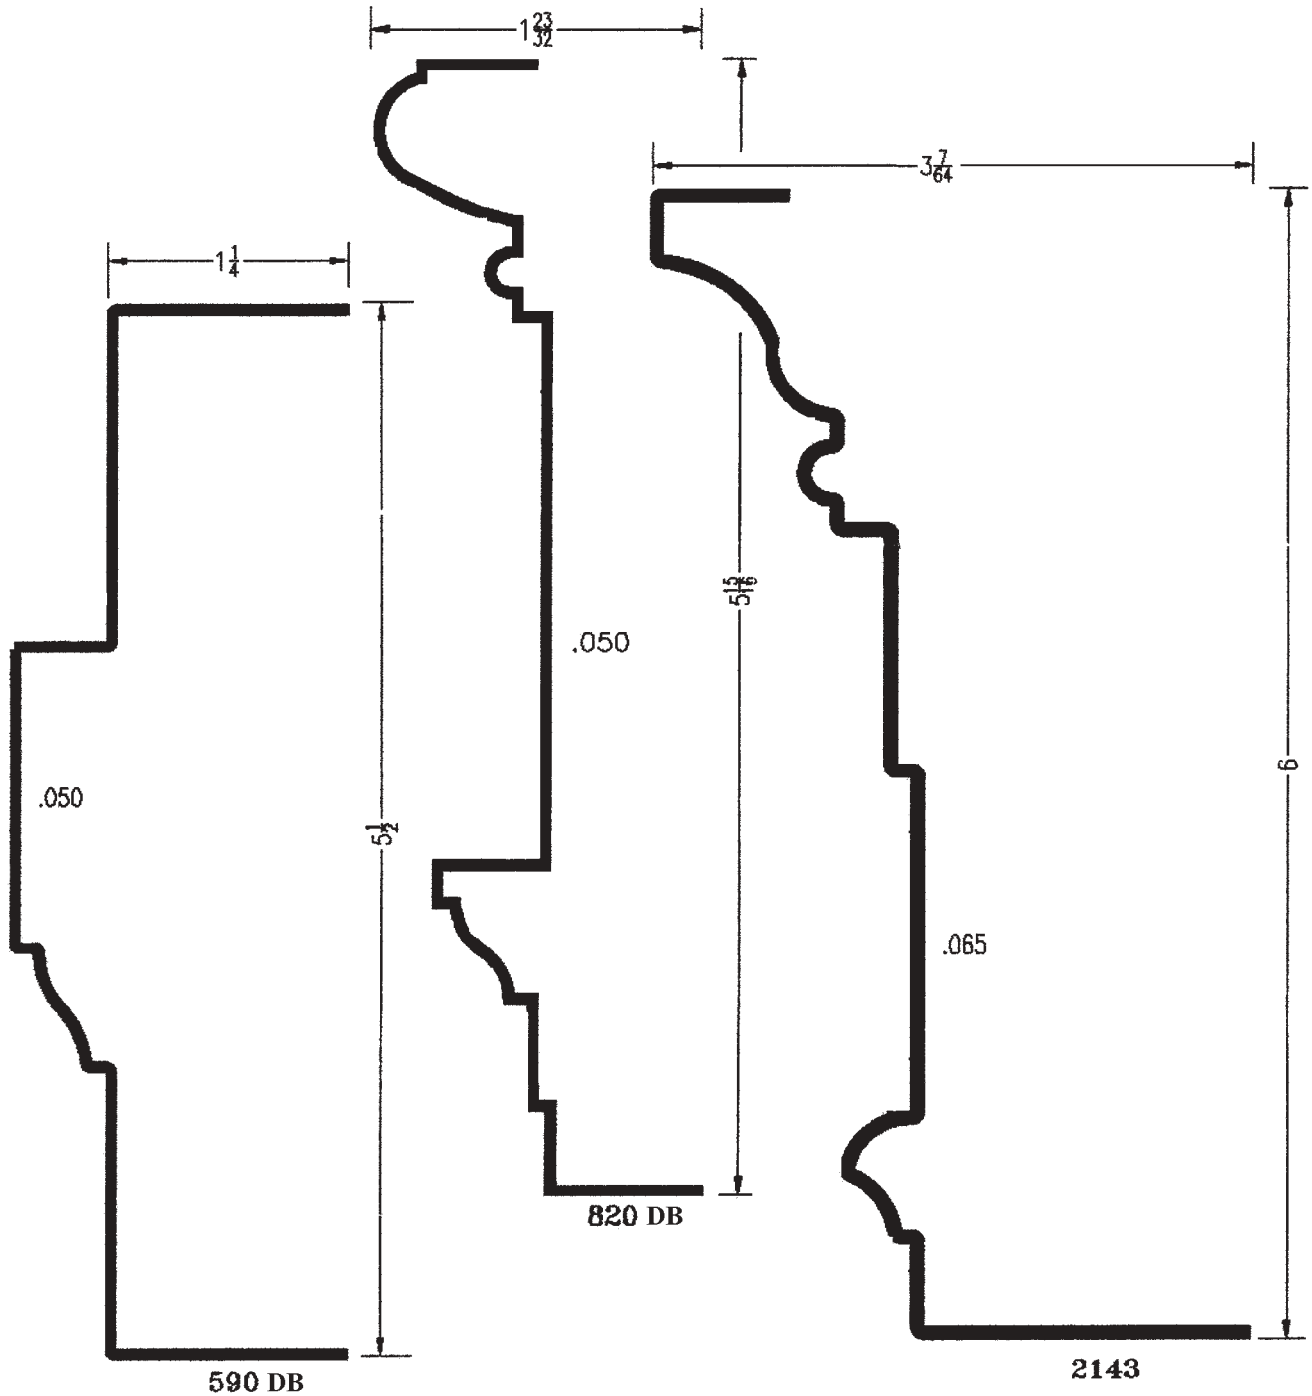

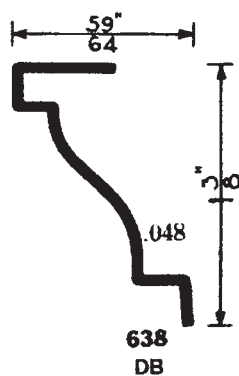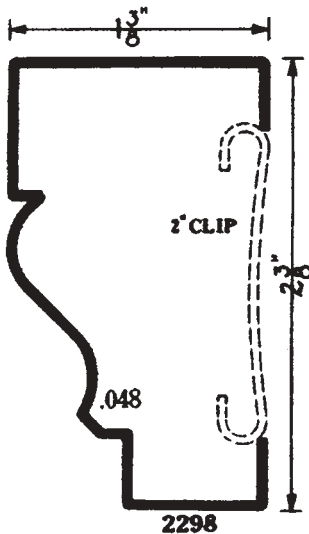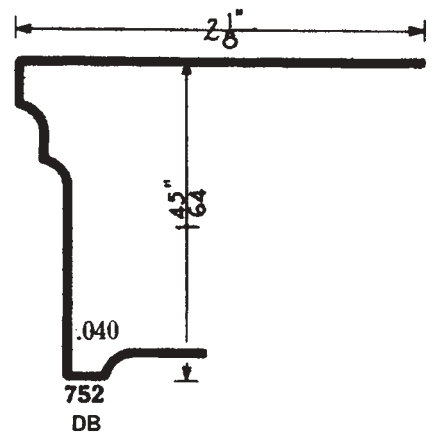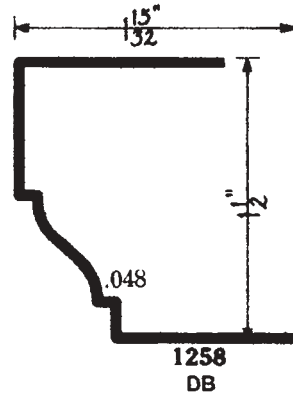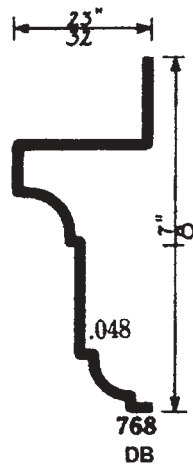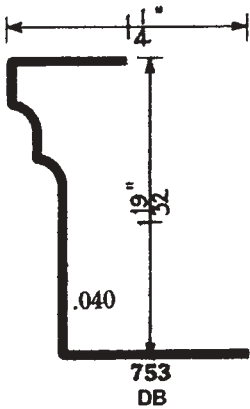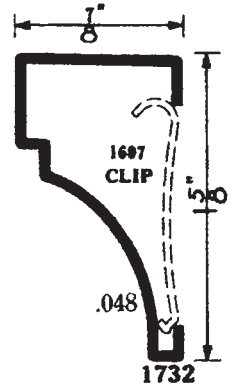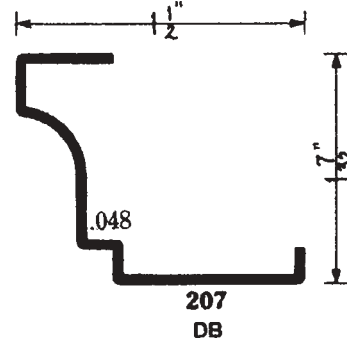
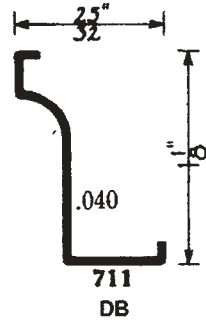
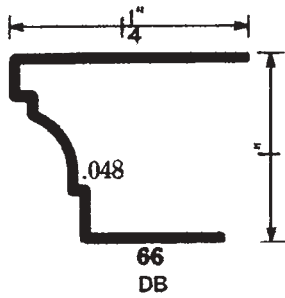
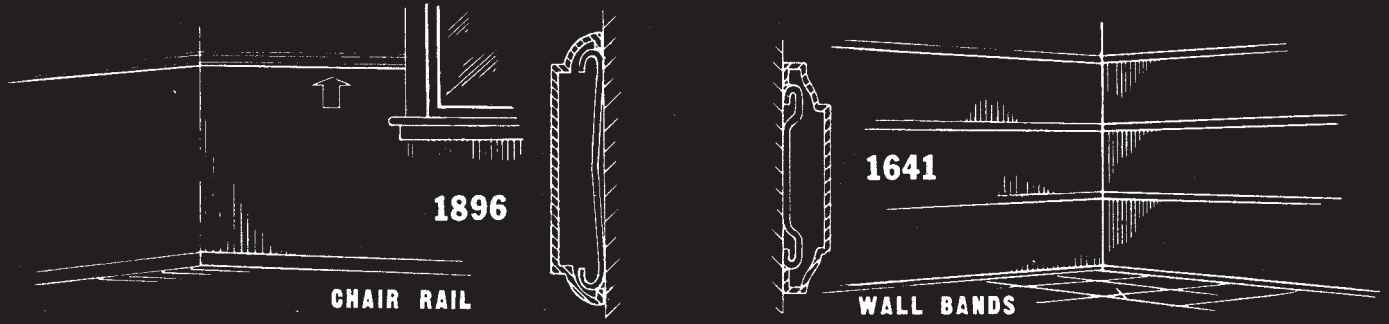




217
WINDOW
GUARD
RAIL


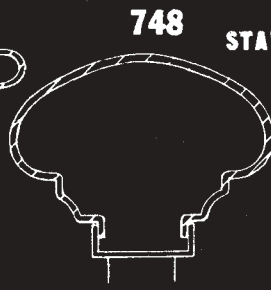


748 STAIR HAND RAIL

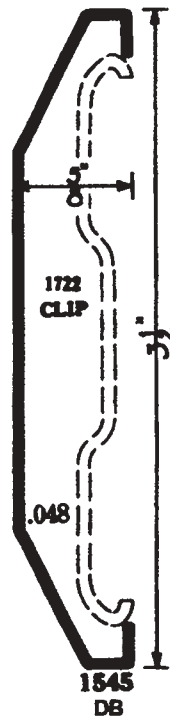
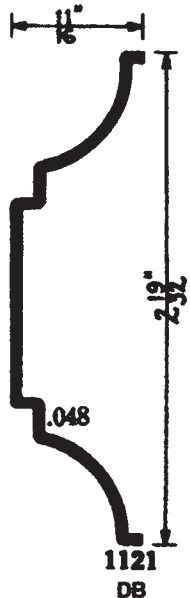
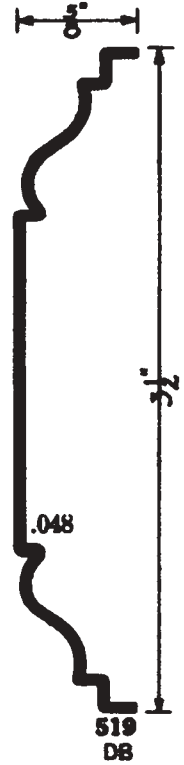
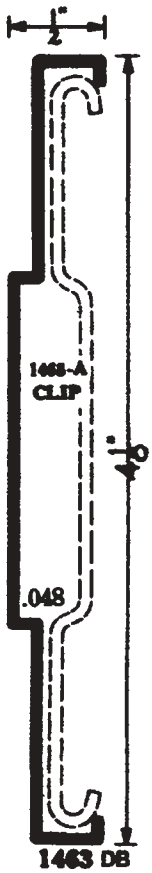




748 STAIR HAND RAIL

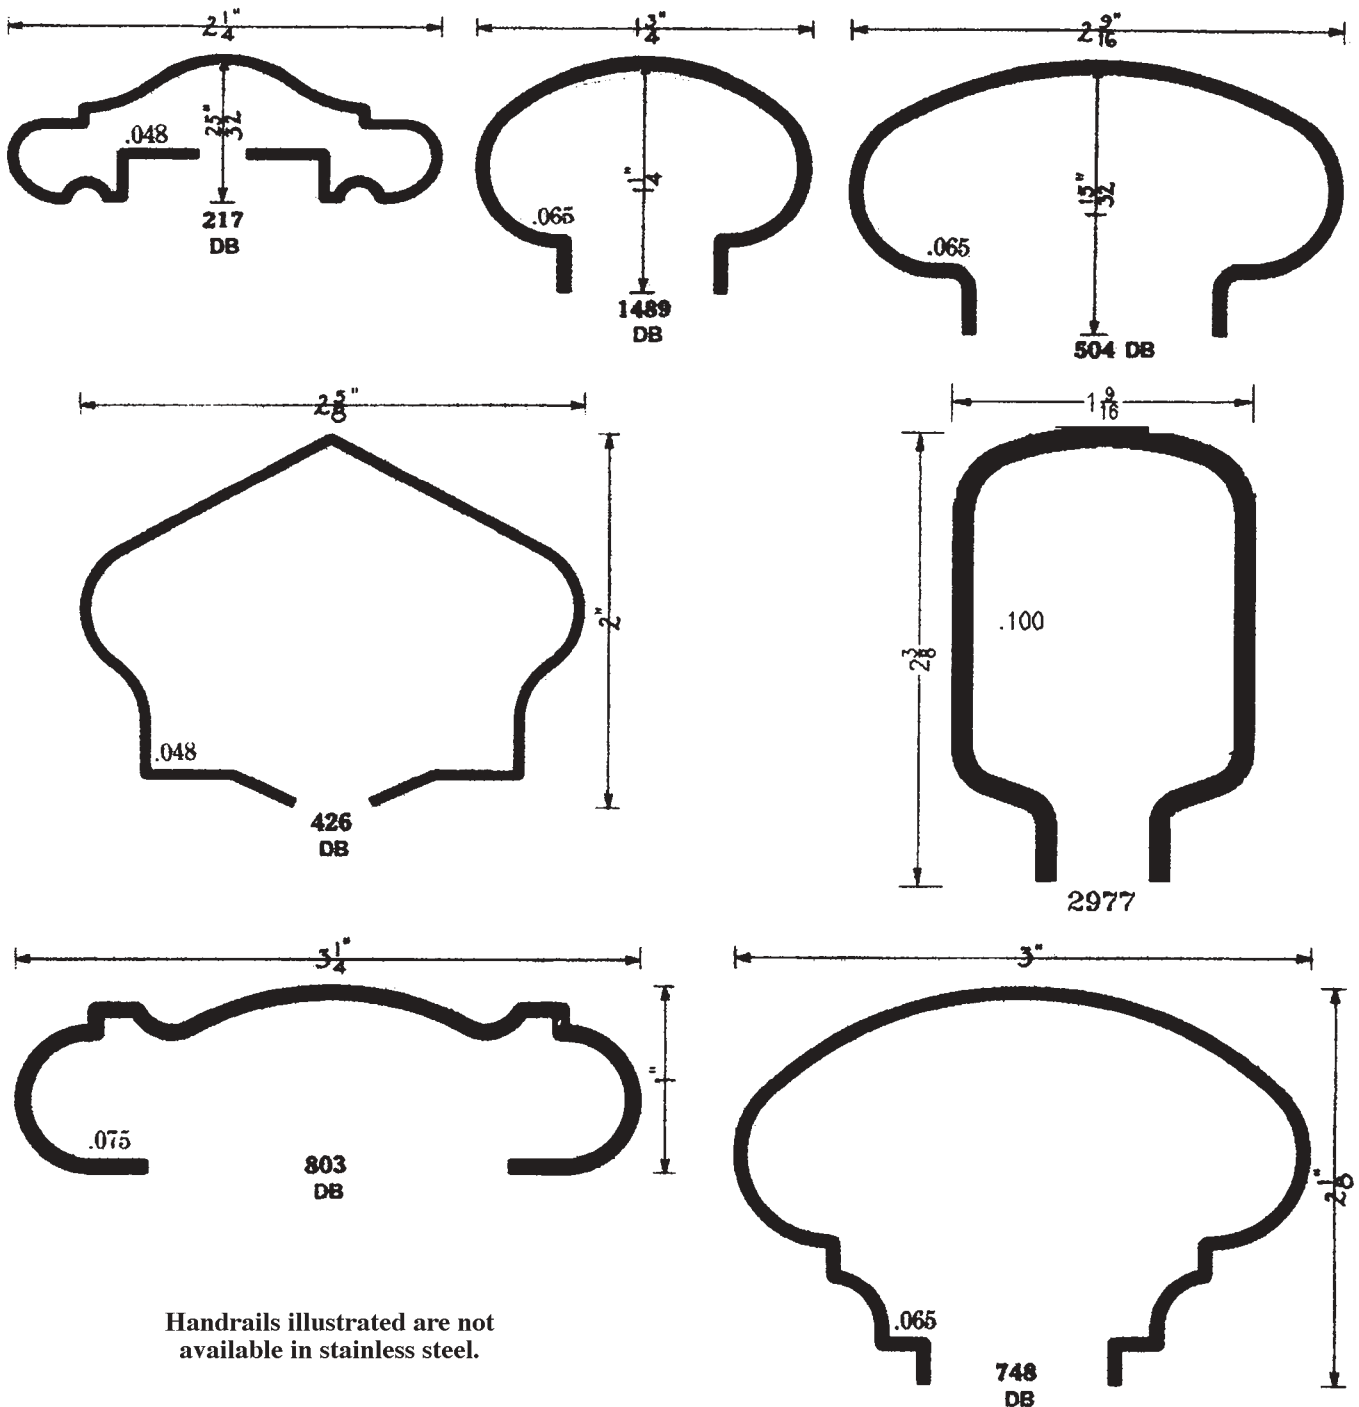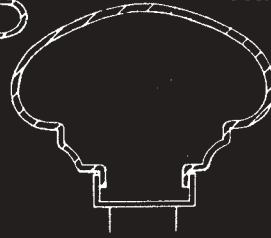

Handrails illustrated are not available in stainless steel.

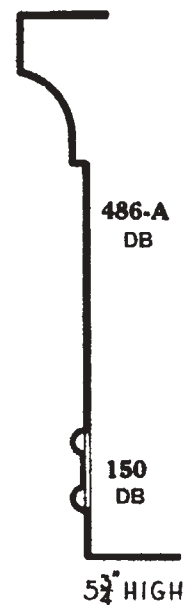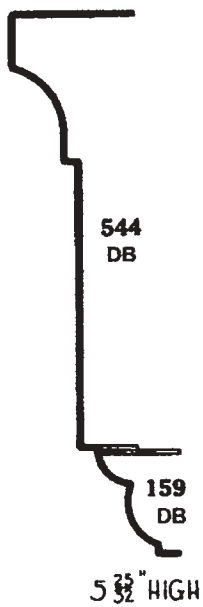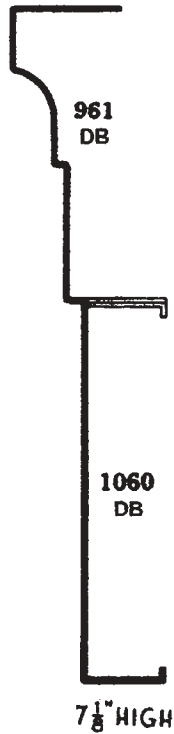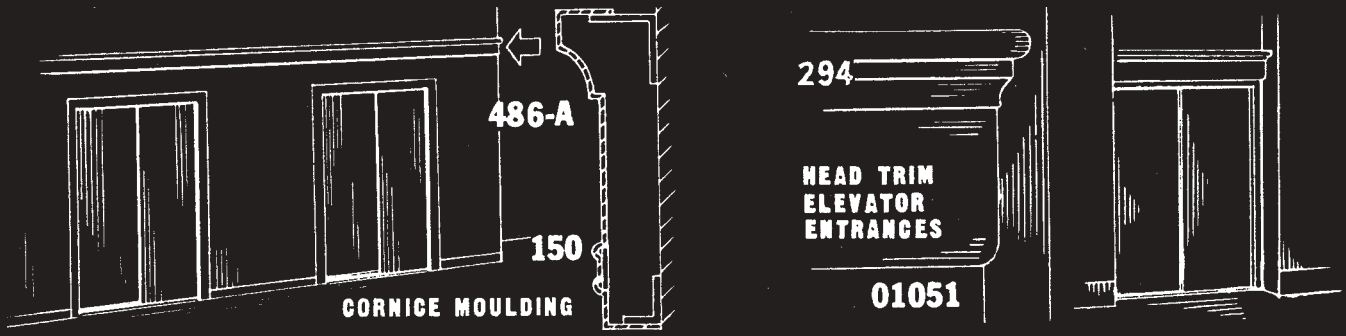

The Cornice Combinations as illustrated above are one-half actual size.